



ASUS Vivobook Q301LA-BSI5T17 Display Replacement

This guide will show you on how to replace the display on the laptop.

Written By: Jens Peter Andersen



INTRODUCTION


This guide will show you on how to replace the display screen on your laptop.

Only replace the screen if it has been physically damaged (e.g. cracks). If there are any other problems, such as the touch screen not functioning or freezing, then this guide will not help you resolve those issues. Instead, view the [troubleshooting guide](#) to find a more appropriate solution.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

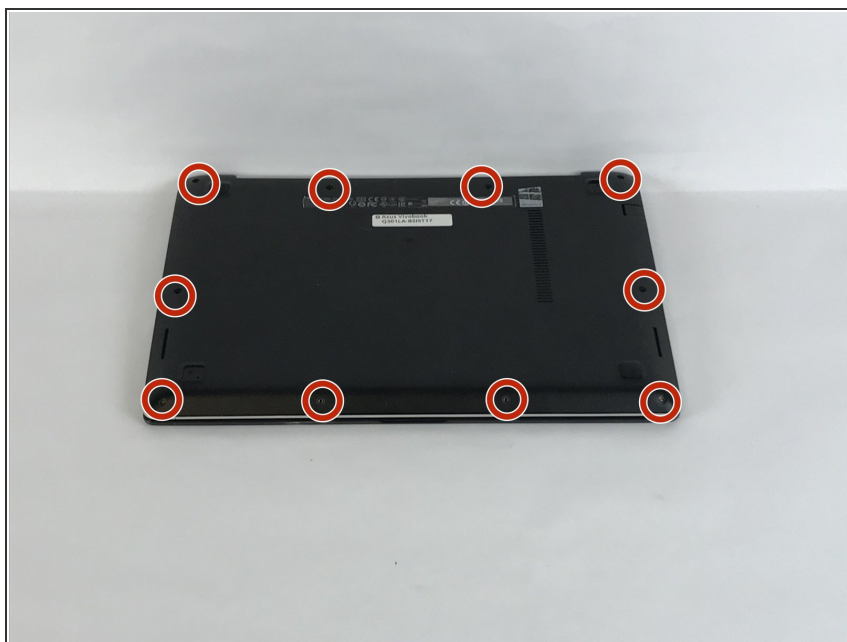


- Unscrew the (10) screws on the bottom of the computer chassis using the JIS #0 screwdriver.

Step 2



- Slightly lift the lower case and push it toward the rear of the computer to free the mounting tabs.

Step 3

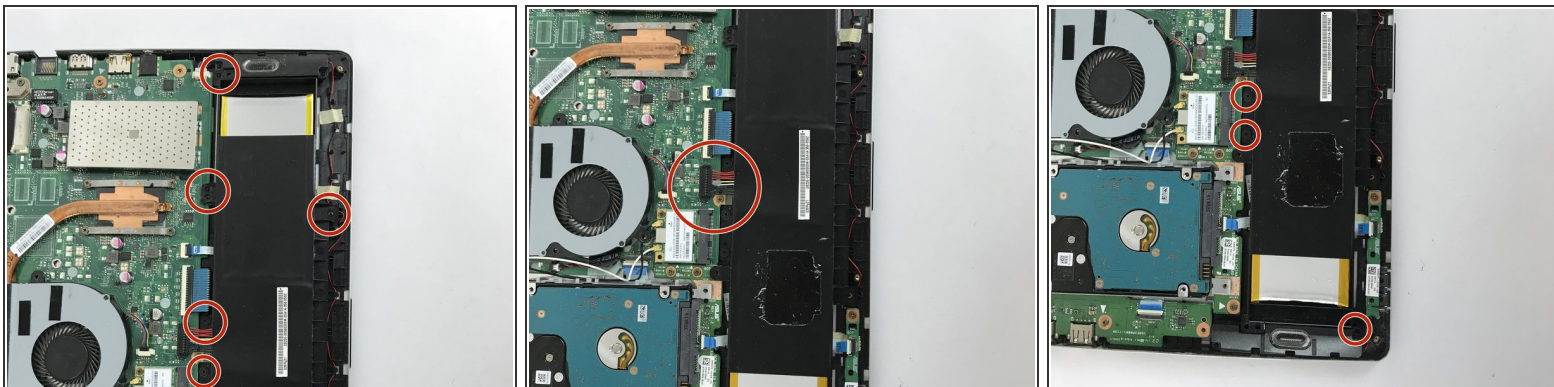


- Remove the (6) six screws attaching the battery to the frame using the JIS #0 screwdriver.
- Use the black plastic spudger to remove the battery from the device.

Step 4



- Gently take the battery out of the laptop, making sure that all wires connecting to it are disconnected.

Step 5 — Display

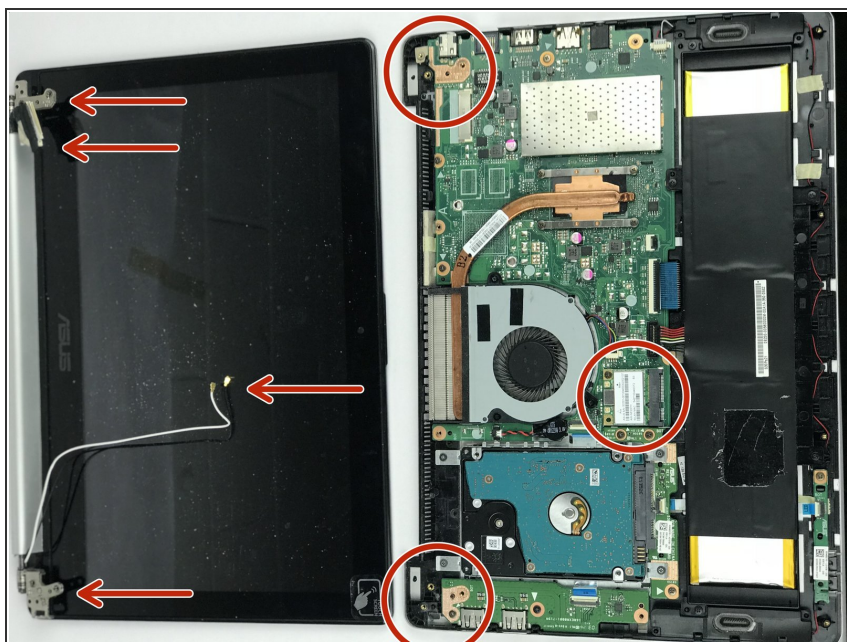

- Remove the screws connecting the display to the laptop. Furthermore, detach the wires connecting the screen to the motherboard.

To reassemble your device, follow these instructions in reverse order.