




Microtek ScanMaker 5900 New Ribbon Cable Replacement

This guide will show the owner of this scanner...

Written By: Taylor Nesheim

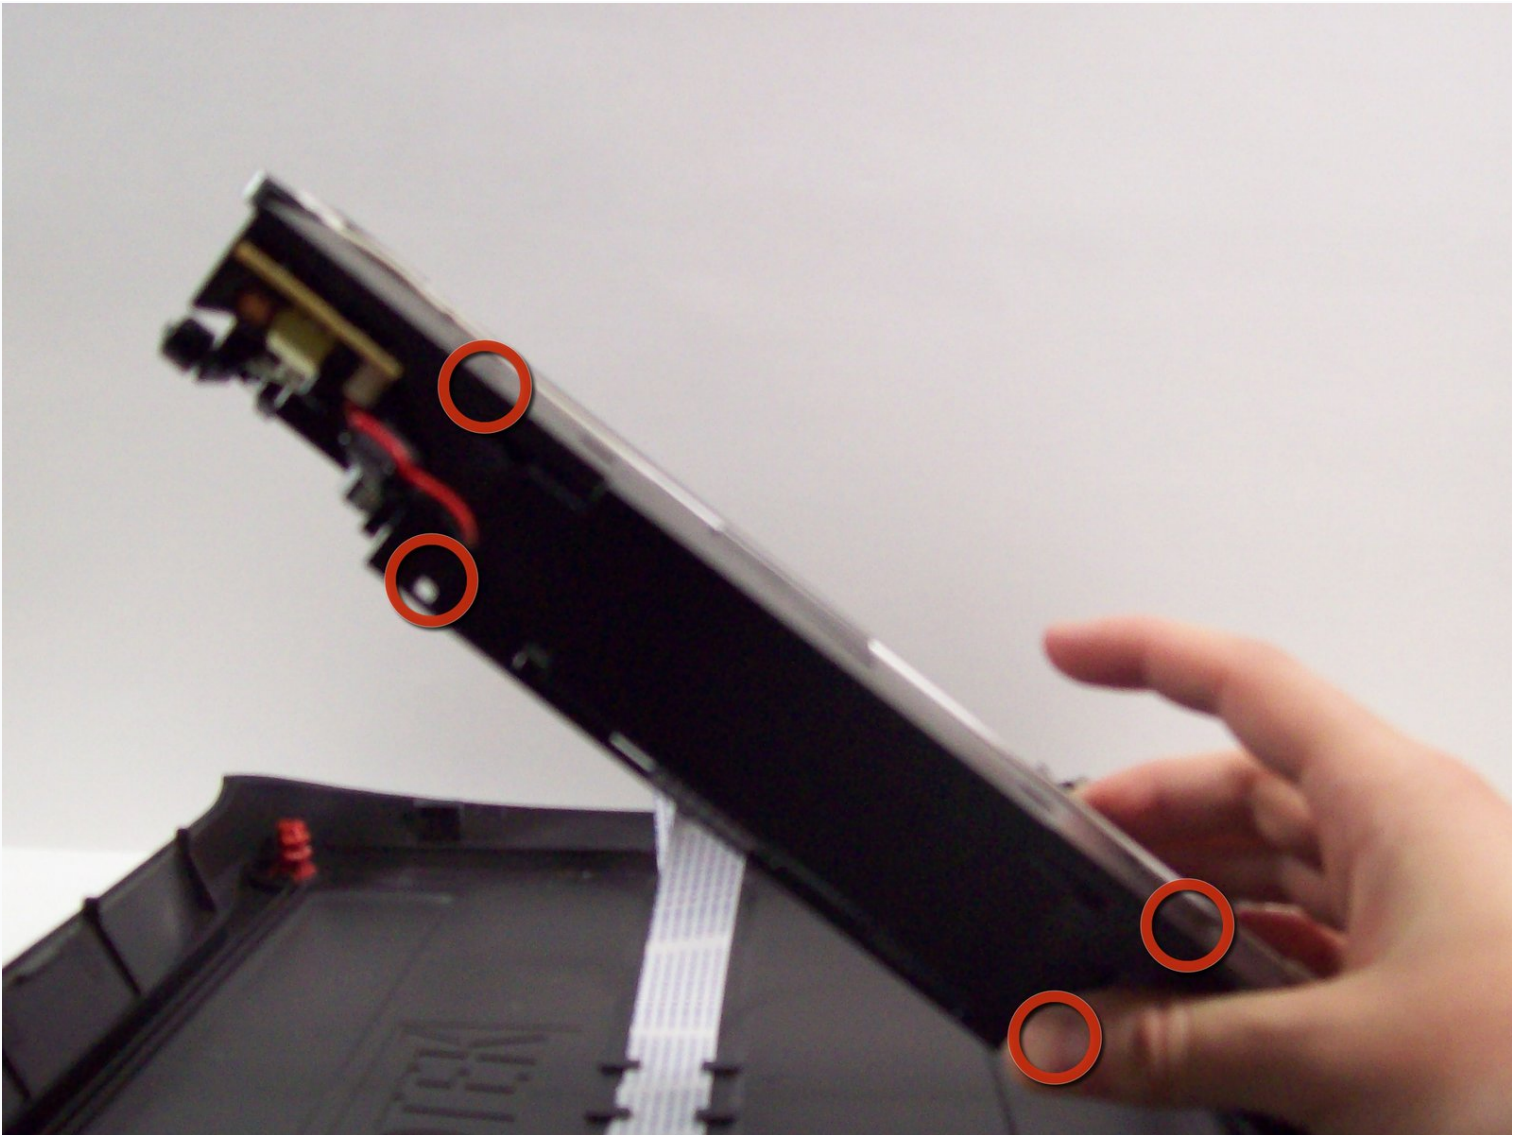

INTRODUCTION




This guide will show the owner of this scanner how to remove and replace a broken or damaged ribbon cable.

TOOLS:

[Tweezers](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — Remove serial port connection

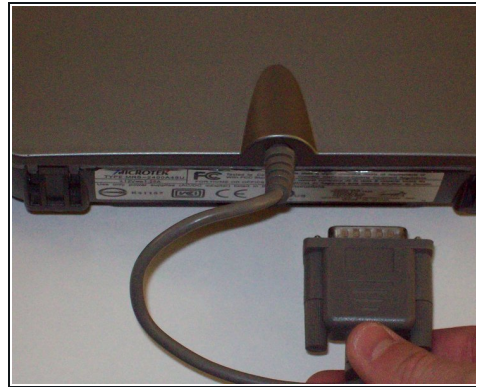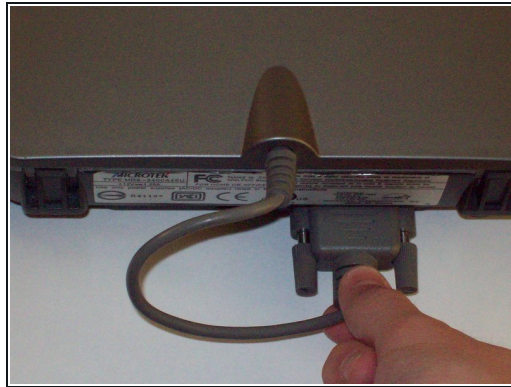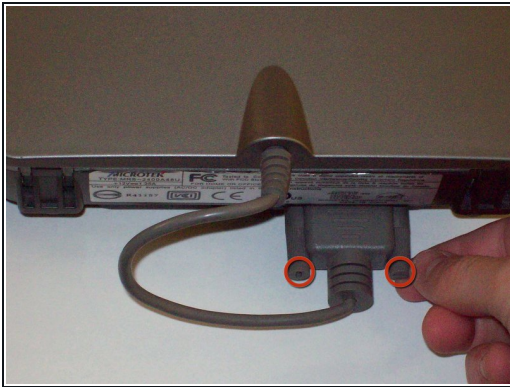



- Loosen the screws on the serial port by turning them counter clockwise by hand.
- After loosening the screws, pull the serial port out.

Step 2 — Remove Lid



- Lift lid to its vertical position.
- Pull lid straight up to remove it from the scanner.

Step 3 — Detach plastic latches

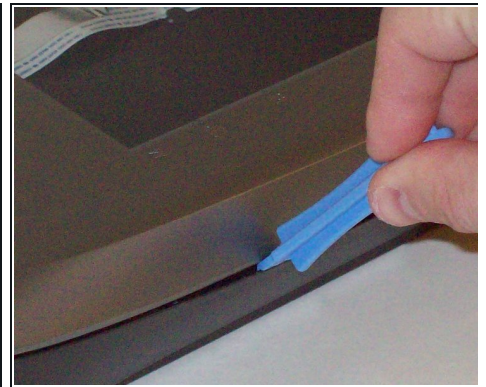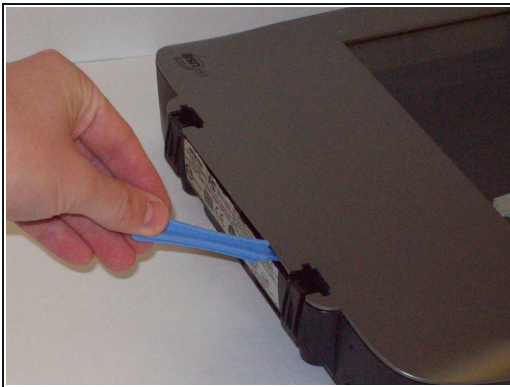


- Push the plastic opening tools into the crack between the top and the bottom of the chassis.

Step 4 — Continue latch detachment



- After placing one plastic opening tool into the slit, slide other plastic opening tools along the slit to detach the top from the bottom of the chassis.
- Go all the way along the chassis until you can lift the upper lid.

Step 5 — Fully remove the upper lid

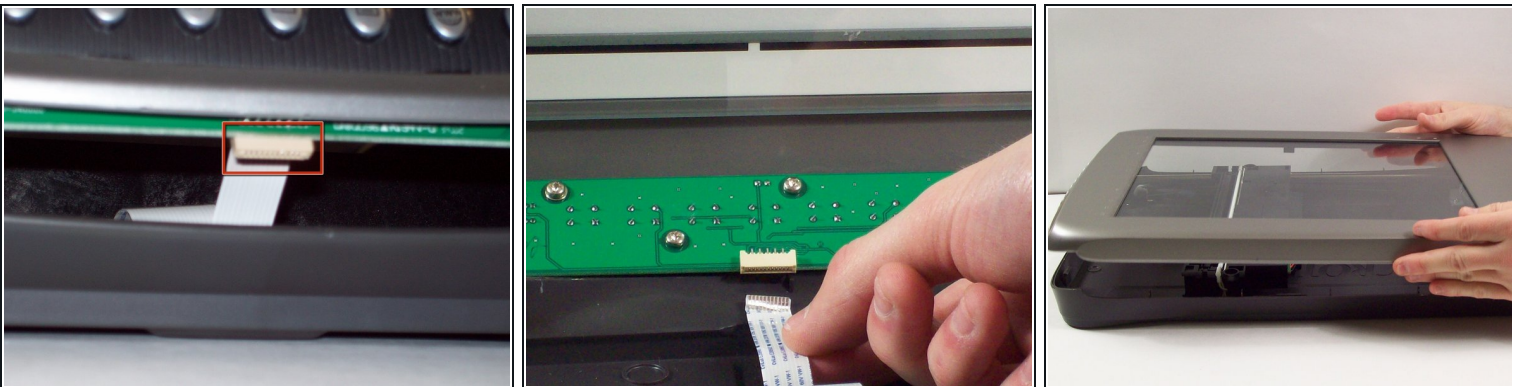

⚠ Do not fully remove the lid until you remove the ribbon cable attached to the front of the upper lid.


- Do this by grabbing the upper lid from the sides and rotating it ninety degrees so it is perpendicular to the bottom lid.
- Grab the ribbon cable and gently pull it out of its slot with your fingers.
- The upper lid can now safely be removed from the bottom lid.

Step 6 — Remove outer plastic housing




- Lift up the central plastic housing inside the scanner.
- There are four plastic tabs located on the outer plastic housing. Push on each of these and pull to remove it.
- Underneath you will see that the ribbon cable is attached to the circuit board.

Step 7 — Remove ribbon cable from circuit board

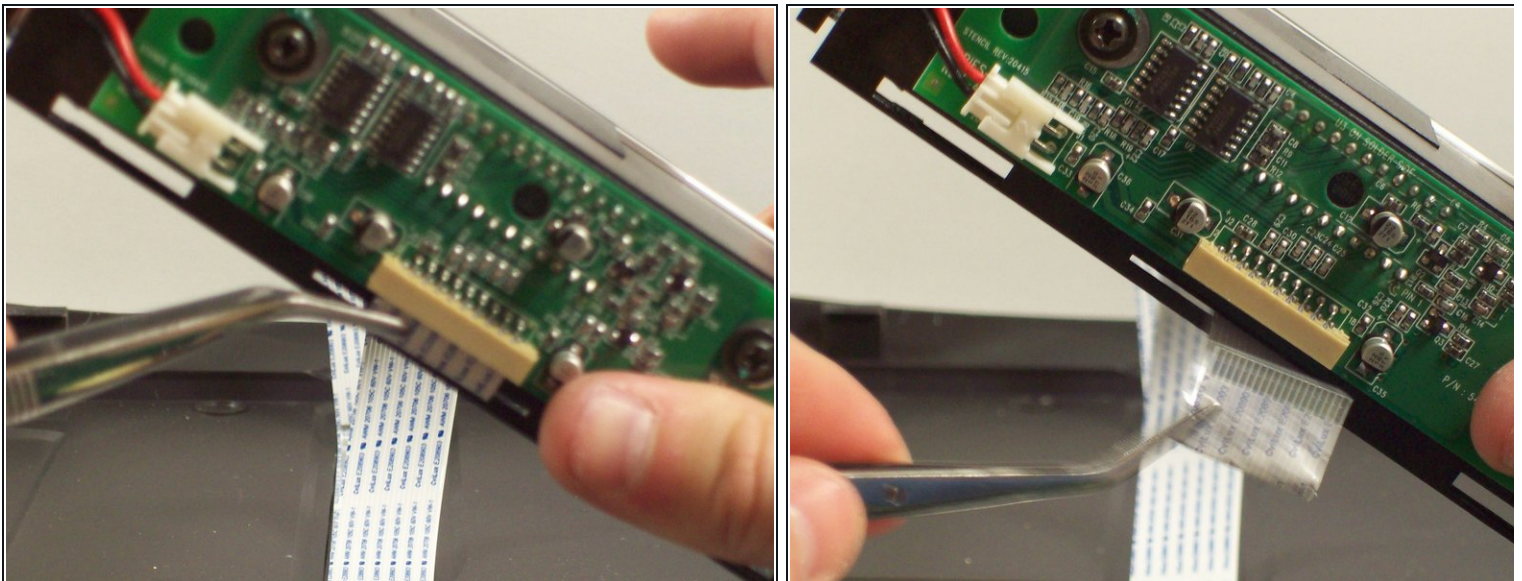

- Grab onto ribbon cable with tweezers and gently pull until it come outs.

Step 8 — Remove ribbon cable from central plastic housing

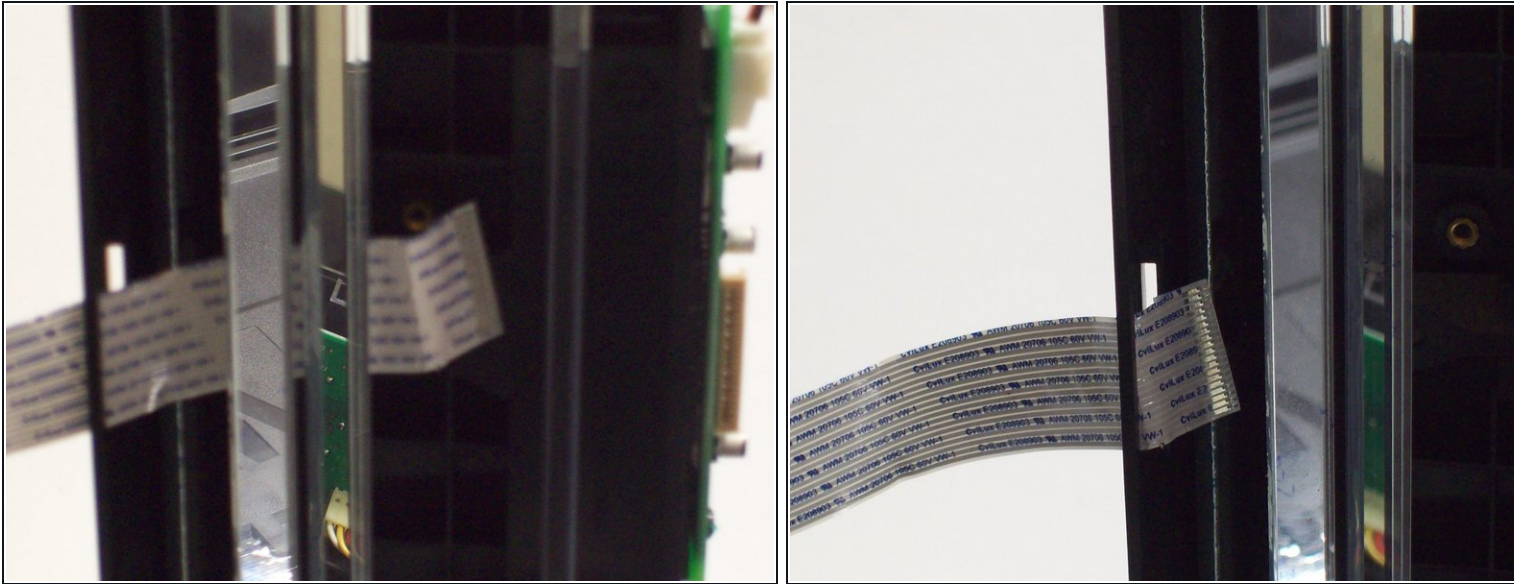


- Simply remove the ribbon cable from within the holes it is wrapped through.

Step 9 — Remove the ribbon cable from between the plastic prongs on the bottom of the scanner.




- Grab the ribbon cable, and gently pull it off of the bottom of the scanner.

Step 10 — Remove ribbon cable from circuit board

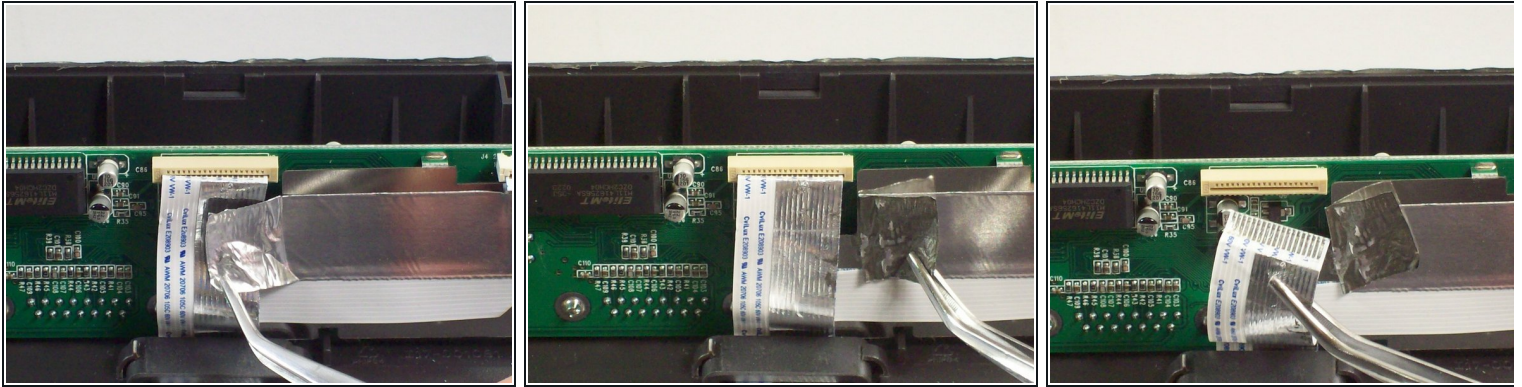

- Peel back the sticky metal from the other side of the ribbon cable.
- Use tweezers to gently remove the ribbon cable from the circuit board.

Step 11 — Remove ribbon cable

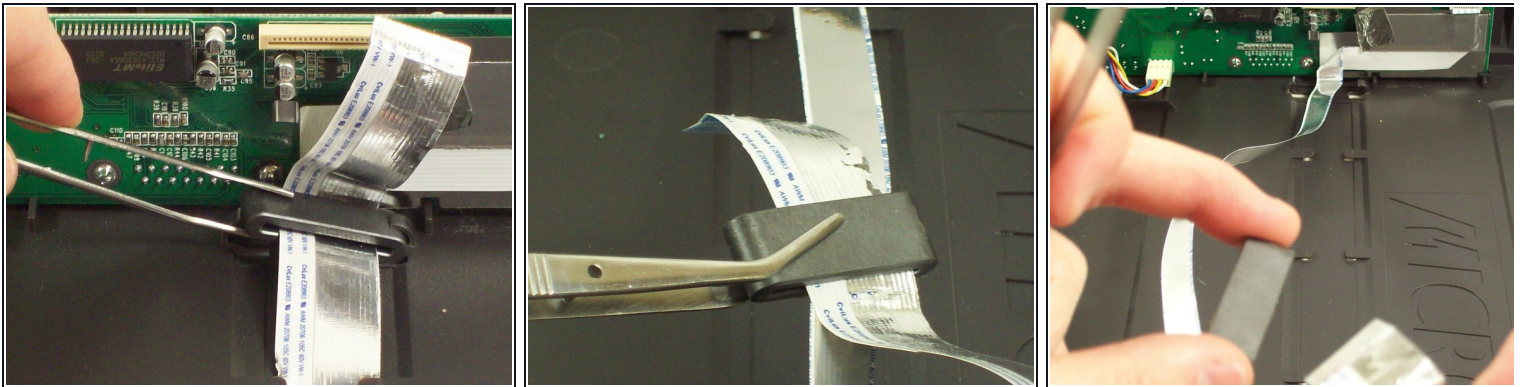

- Remove the metal housing for the ribbon cable at the base of the scanner.
- Use the tweezers to slide off the metal housing.
- The ribbon cable is now completely free to be replaced.

To reassemble your device, follow these instructions in reverse order.