



# Philips Marathon Vacuum FC9202 disassembly

Disassembling Philips Marathon Vacuum FC9202

Written By: christophe



## Step 1 — Philips Marathon Vacuum FC9202 disassembly



- To open the unit, first remove the filter cover, by removing the hinge after removing the end caps

## Step 2



- dismantle the handle of the filter cover, removing the Torx screws hidden under the handle

## Step 3



- the chrome plate can be removed with a screwdriver
- remove the min/max button and the on/off button; removal of a torx screw
- electronic card update


## Step 4



- To remove the housing, you must remove 7 additional Torx screws



## Step 5

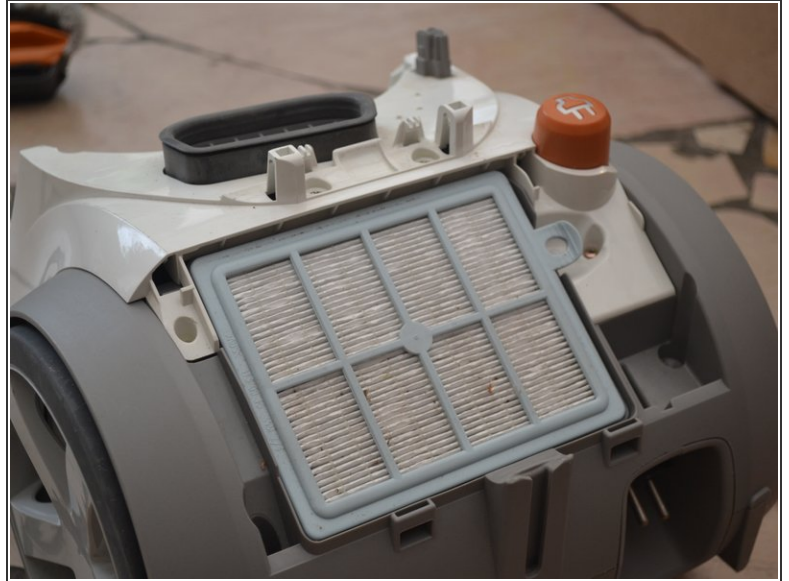

- Rear filter removal

## Step 6



- Removal of 4 torx screws

## Step 7



- 2 Torx screws under the hinge

## Step 8



- 3 screws at the front of the housing

## Step 9



- housing removal

To reassemble your device, follow these instructions in reverse order.