




# Lexibook Junior Tablet Motherboard Replacement

This guide removes the motherboard for a wide variety of software issues.

Written By: Rachel Klesius

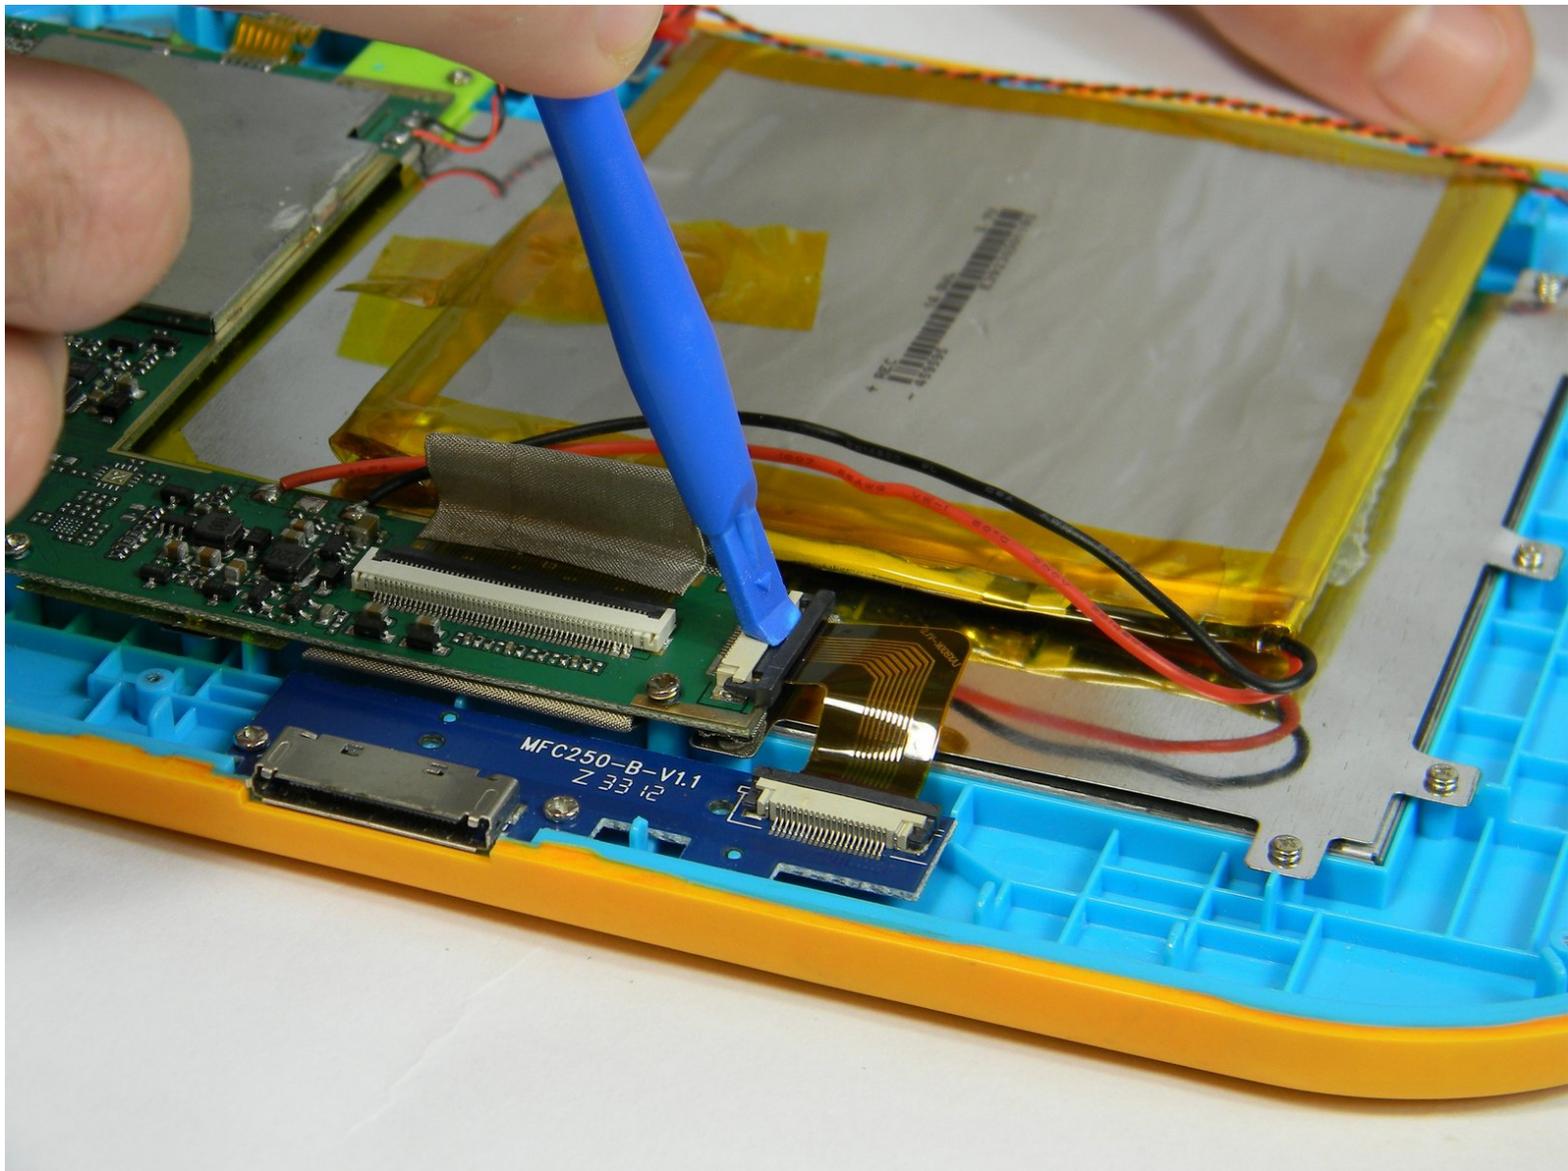

---

## INTRODUCTION


This guide replaces the motherboard, which houses the majority of the components for the Lexibook Junior tablet. This guide requires the removal of the battery first.

---

### TOOLS:

- [Metal Spudger](#) (1)
  - [Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Soldering Iron](#) (1)
-

## Step 1 — Battery

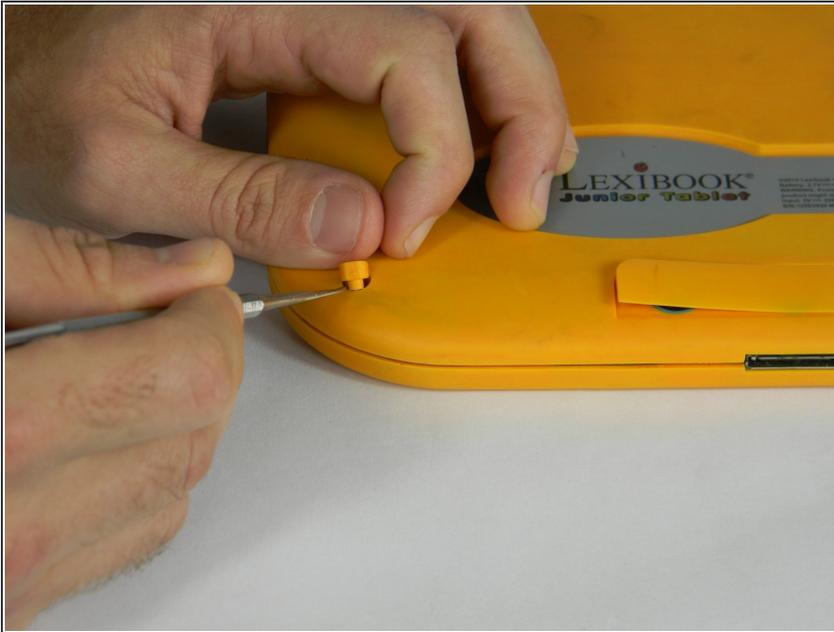


- ⚠ Make sure your device is powered off before replacement to prevent electric shock.
- With the device screen face down, use the metal spudger to remove the small rubber circles on all four corners of the device. The screws should now be revealed.
- Using the metal spudger, pry open the small, long rubber rectangle on the back of the device to reveal more screws.

## Step 2



- Using a Phillips #00 screwdriver, remove the four 6.8mm screws from the four corners of the device.
- Using the same screwdriver, remove the three screws that were behind the rubber rectangle. These screws do not come out of the device.
- Use the plastic opening tool to gently pry open the back panel of the tablet.


### Step 3

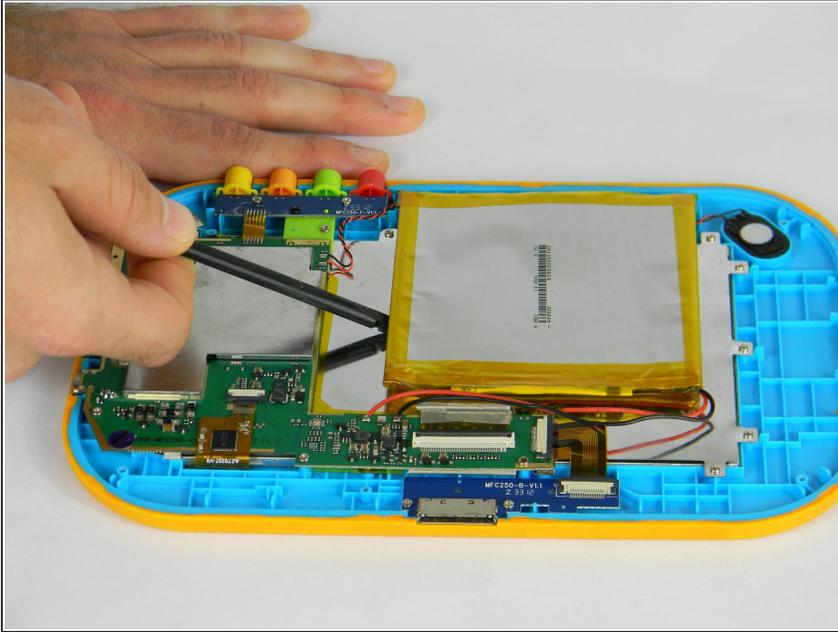

- Use the nylon spudger to gently pry under the battery to remove it.

⚠ Make sure you do not damage the battery or metal plate in this process and only use a nylon spudger. Be patient and work slowly for the best results.



### Step 4

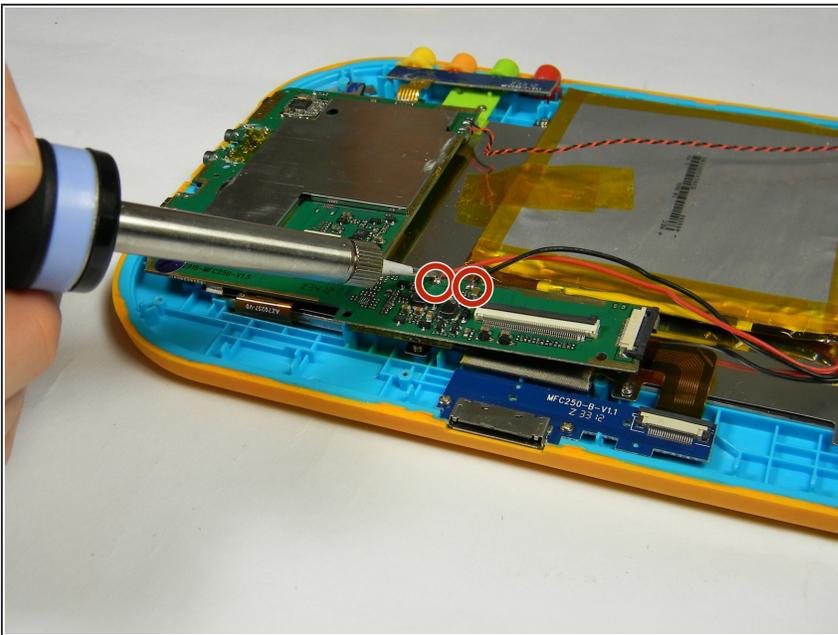

- Use a soldering iron to remove the battery from the motherboard safely.


ⓘ For advice on how to solder, check out [iFixit's Soldering Guide](#).

## Step 5 — Motherboard

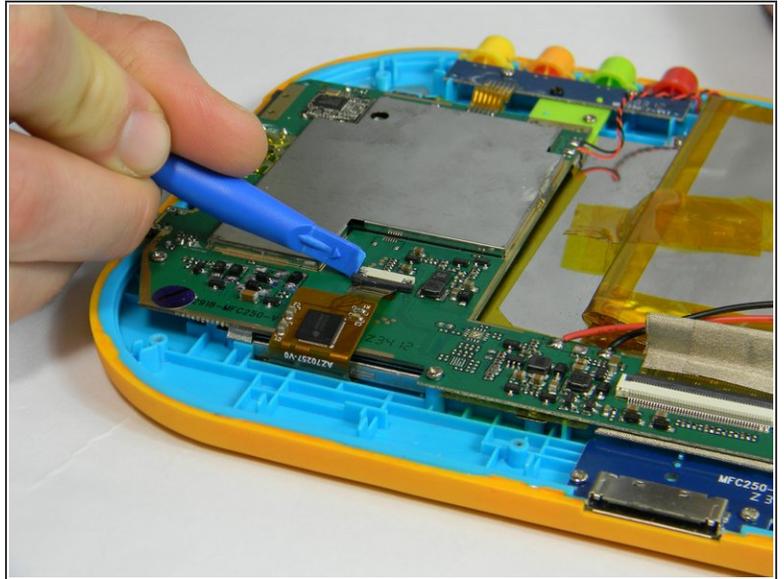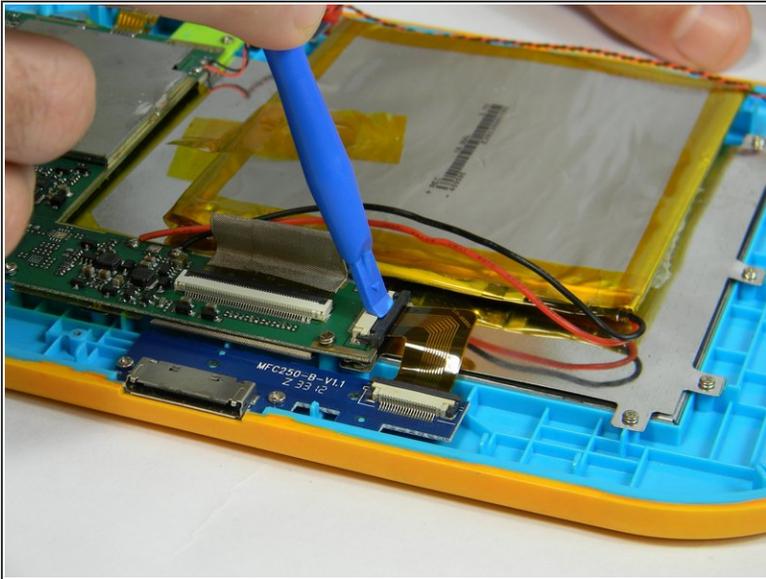


- Using the plastic opening tool, gently push the two small, black and white switches out in the direction of the ribbon wires.
- Slowly pull the ribbon wire out of the switch to free it.

## Step 6

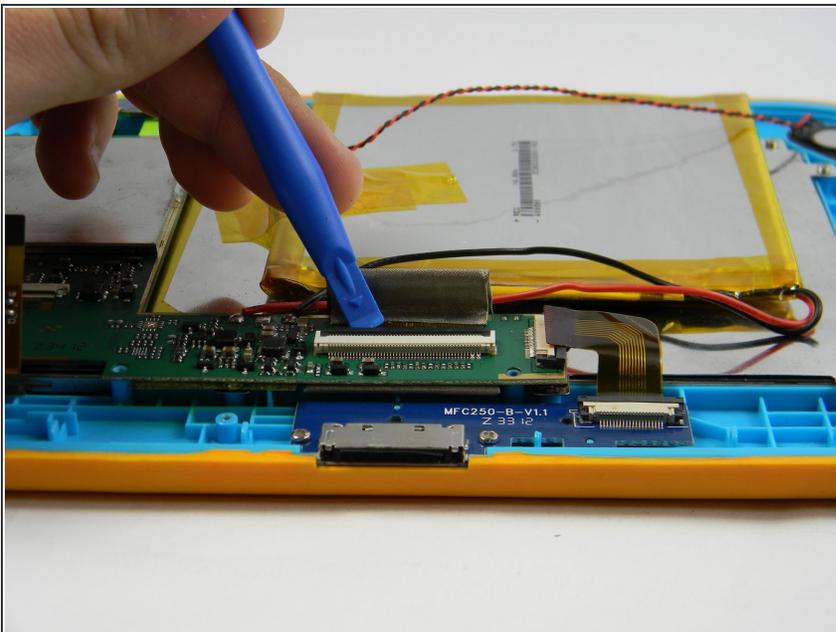


- Push the larger black and white strip leading to a ribbon wire upward using the plastic opening tool.
- Carefully pull the ribbon wire out of the switch

## Step 7

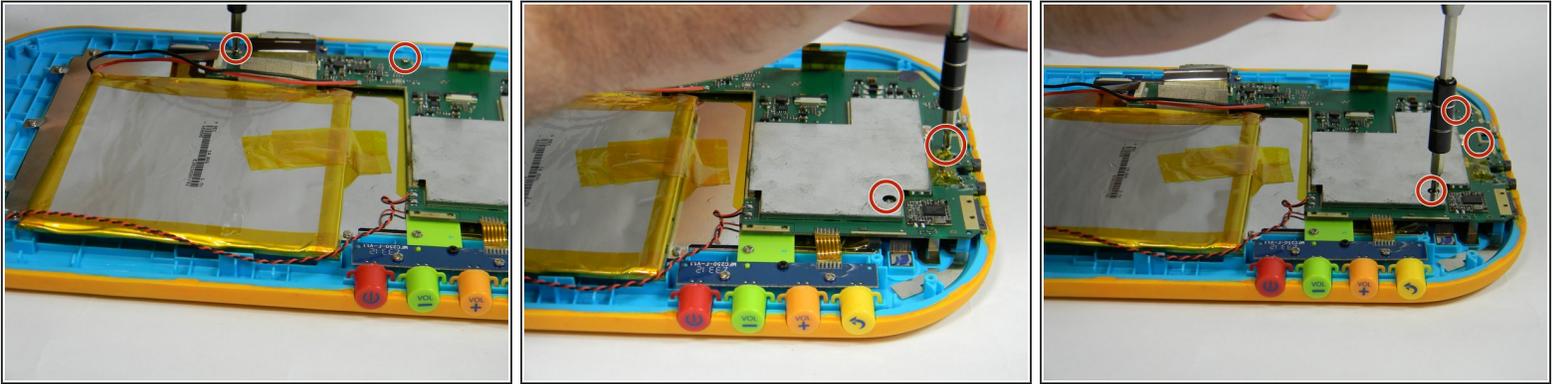


- Unscrew the five 4 mm screws around the perimeter of the motherboard using the ph00 size phillips head screwdriver.

## Step 8

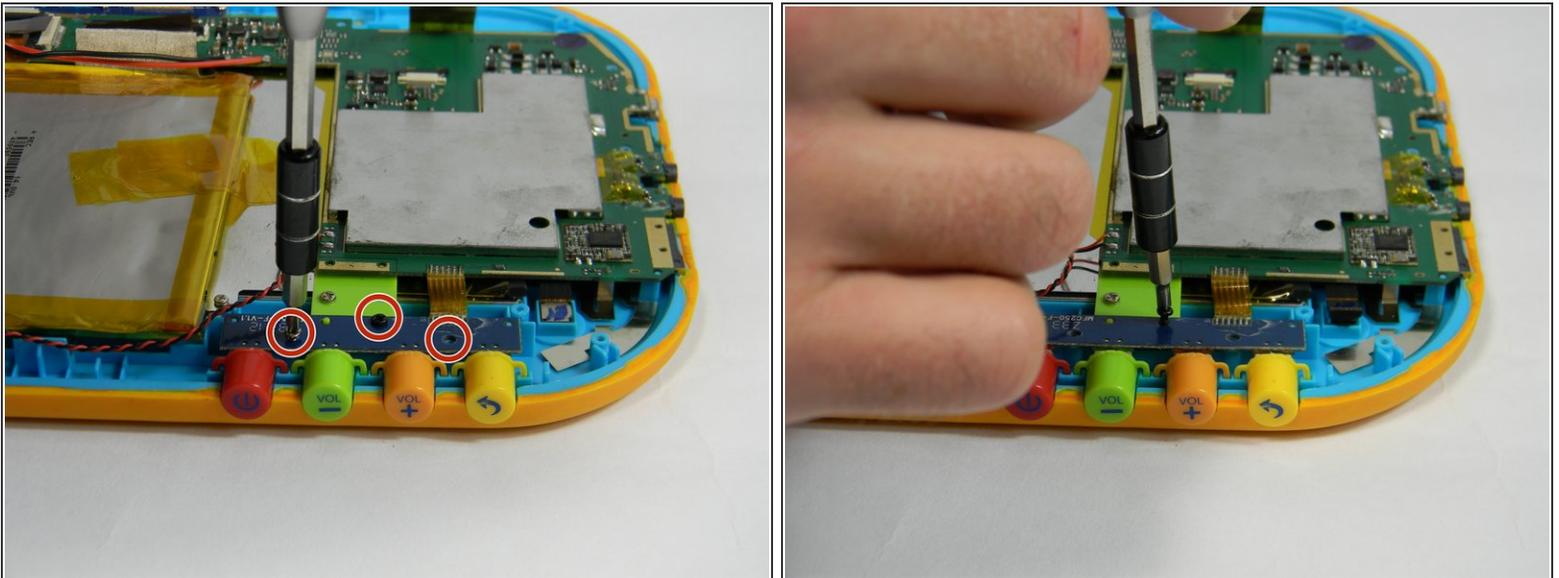

- Remove the button board by unscrewing two more 4 mm screws and one 6.5 mm screw

## Step 9

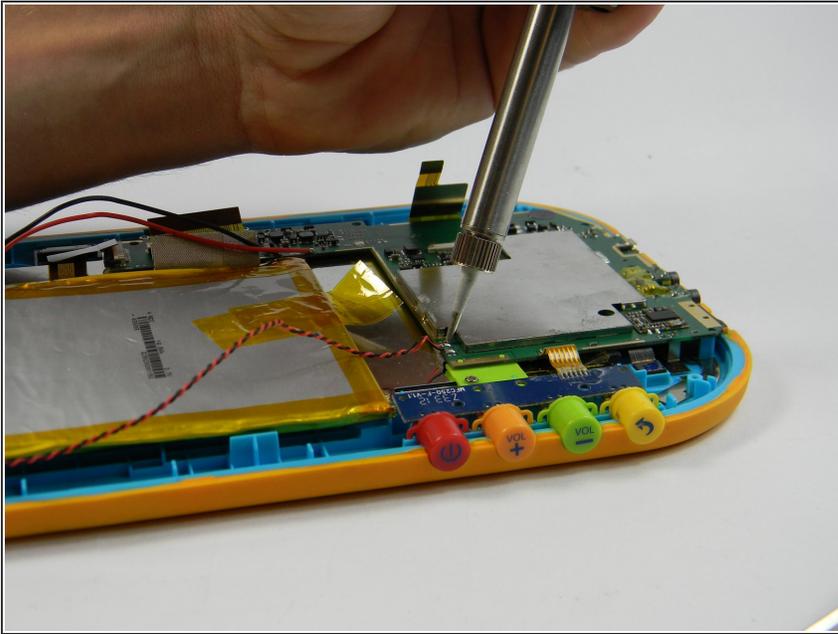

- Solder off connections from the wire connecting the motherboard to the speaker.
- ⓘ For how to solder, check out [iFixit's Soldering Guide](#).

To reassemble your device, follow these instructions in reverse order.