



# Nexus 5 LCD Screen & Digitizer Assembly Replacement

This guide provides instructions on how to replace a cracked or damaged LCD screen and Digitizer Assembly for the Google Nexus 5.

Written By: Richard Suovanen



## INTRODUCTION

This guide provides instructions on how to replace a cracked or damaged LCD screen and Digitizer Assembly for the Google Nexus 5.

### TOOLS:

- [SIM Card Eject Tool](#) (1)
- [iFixit Opening Tool](#) (1)
- [iFixit Opening Picks \(Set of 6\)](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Suction Handle](#) (1)
- [iOpener](#) (1)

### PARTS:

- [Nexus 5 LCD and Digitizer](#) (1)
- [Nexus 5 Display Adhesive](#) (1)

## Step 1 — SIM Card



- i** Power off the device by holding the power button until the "Power Off" popup appears. Tap the popup and wait for the device to turn off.
- Insert a SIM card eject tool or a paper clip into the hole next to the SIM card slot, which is located just under the power button. Do not force the paper clip if it is too thick; instead use the head of a sewing needle.
  - Push the tool into the hole until you see the card pop out.

## Step 2



- Gently remove the SIM card with your fingers, or a pair of tweezers if the SIM holder does not fully eject.
- ★ Make sure the chip is facing the rear of the phone when reinserting the SIM card.

### Step 3 — Back Cover



- Use a plastic opening tool to free the clips on the top and each side of the back cover.
- ⓘ The bottom is secured with some adhesive foam. You should be able to finally free the back cover using an opening pick. The "snaps" at the bottom edge are more like hinges, so release all others then swing the back cover off outward from the top, and these fasteners will release without breaking.
- ⚠ It's best to avoid prying around the SIM card slot and volume controls, as the plastic in these areas is very thin and likely to break from prying.
- 📌 When you *replace* the cover, there is a snap about even with the flash window that must also be attached (one of three that secure the back cover to the midframe). Qi (wireless) charging may not work if this isn't secure. Apply gentle but firm pressure over the "S" in "Nexus" and slide your thumb up towards the top, and the snap will engage.

## Step 4 — Midframe



- Remove the six 4.0 mm Phillips #00 screws that secure the midframe to the phone.
- ⚠ Ensure you retain all six of the 4.0mm screws! These hold the midframe securely and closely to the motherboard. The three small snaps on the back cover that attach to the midframe ensure the NFC antenna and wireless charging coil connectors contact securely with the motherboard, and work reliably.
- To replace the LCD screen and digitizer, remove the additional four 4.0mm daughterboard cover screws with the same screwdriver. You may have to pierce through clear adhesive material to remove them.

## Step 5



- Remove the midframe from the phone.
- ⓘ Examine the midframe and the back cover and you'll find three very small snap attachment points for the back to the midframe. These ensure that the NFC and wireless charging antenna contacts connect with the corresponding spring connectors on the motherboard. Ensure the snaps are in good condition.

## Step 6 — Battery



- Use the flat end of a [nylon spudger](#) to disconnect the battery connector.

## Step 7




- Use the flat end of a spudger to disconnect the daughterboard ribbon cable and pull it away from the battery.

## Step 8





- Use a plastic opening tool to pry the battery out of its housing.
  - ⓘ You may need to use a heat gun to apply a small amount of heat to soften the adhesive below the battery.
- ⚠ **Do not puncture or bend the battery.**
- If replacing the battery, bag the old battery up and recycle responsibly at a suitable location.

## Step 9 — Motherboard

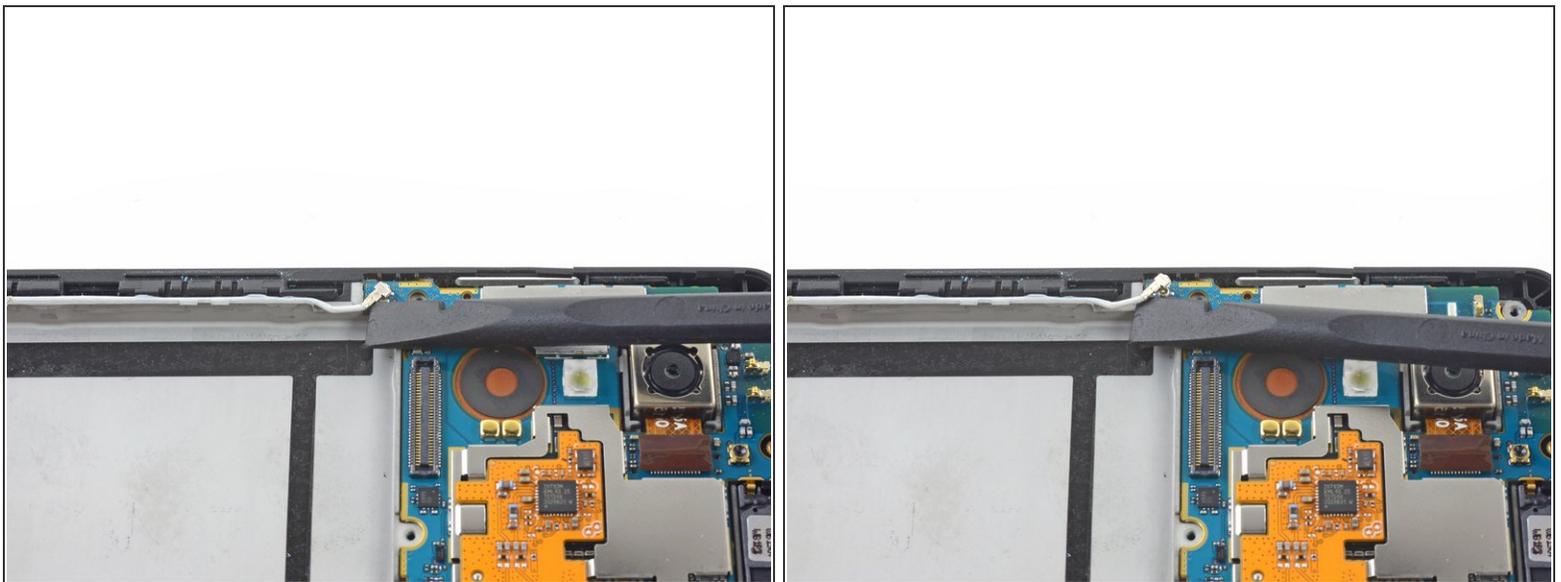

- Use the flat end of a spudger to disconnect the left antenna cable.

## Step 10

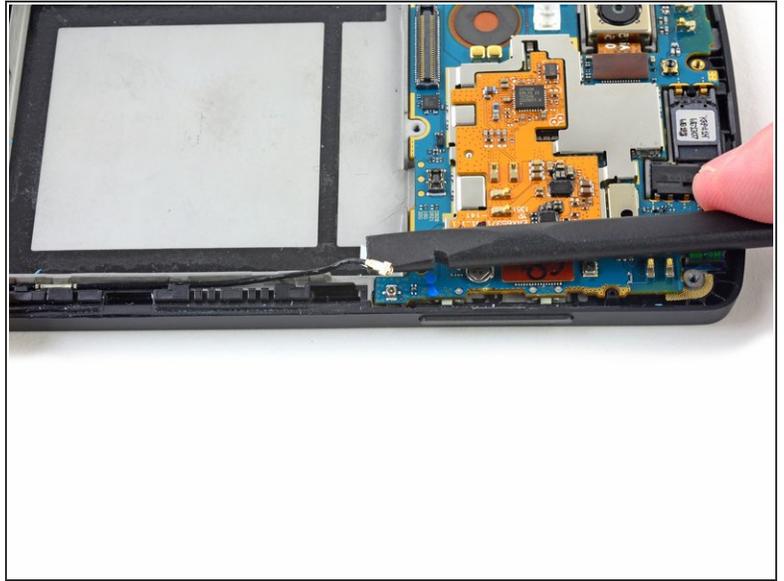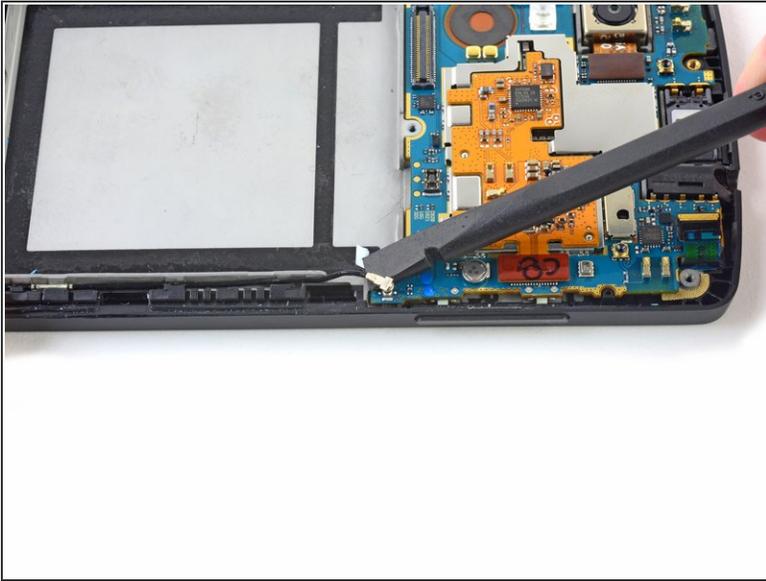


- Use the flat end of a spudger to disconnect the right antenna cable.
- ☒ These must be firmly secured during reassembly. Failure to secure the antenna connections will affect your reception and call quality.

## Step 11




- Use the flat end of a spudger to disconnect the ribbon cable that connects rear-facing camera to the motherboard.

## Step 12

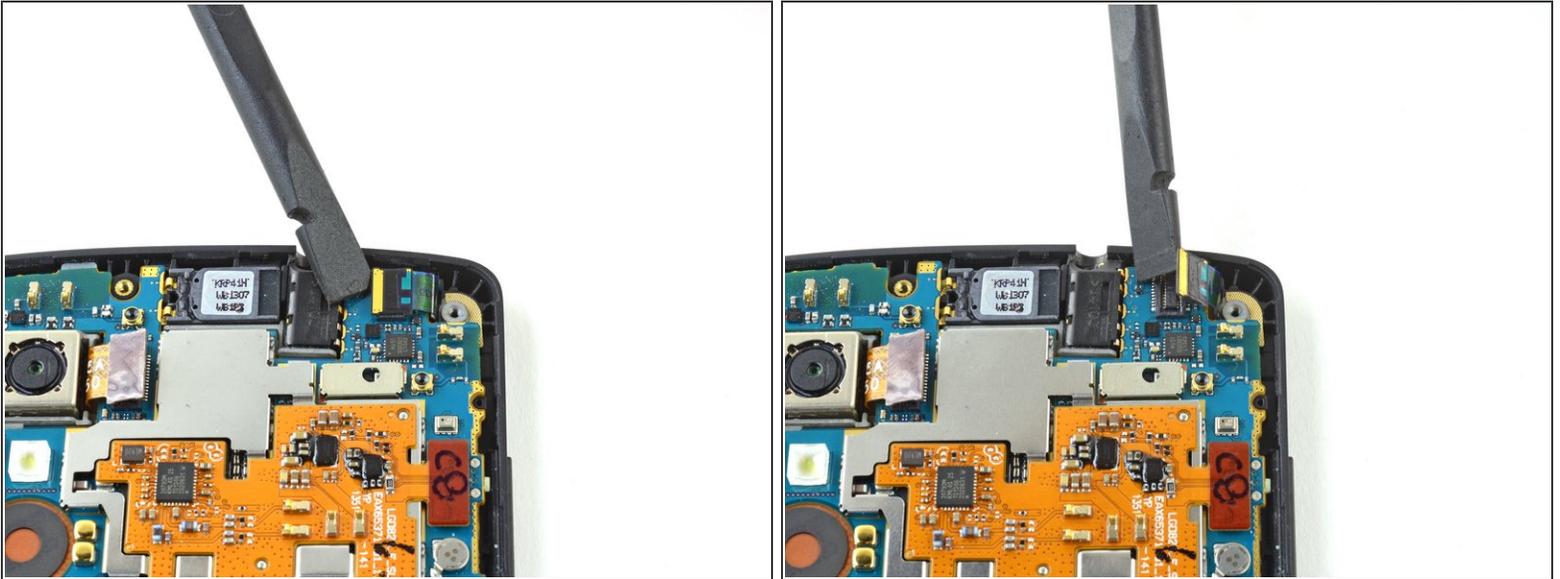

- Use the flat end of a spudger to disconnect the front camera ribbon cable.

## Step 13

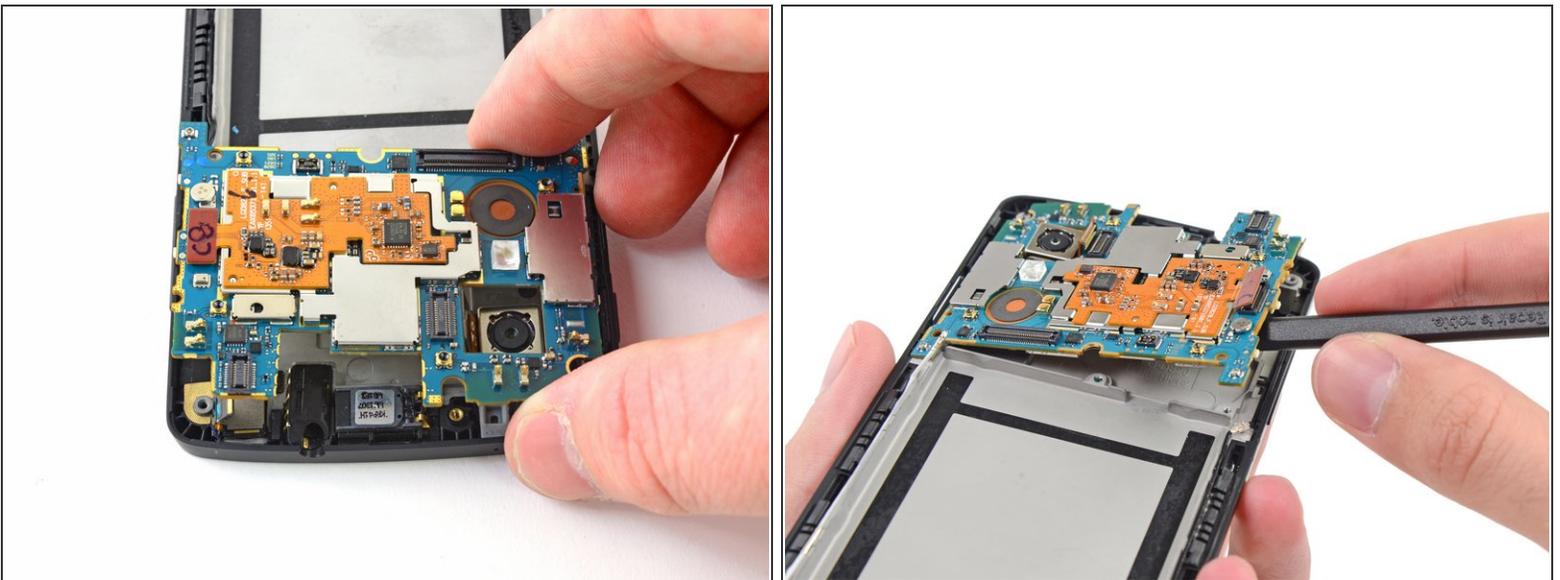

- Gently lift the motherboard up and out of the device.

## Step 14 — LCD Screen & Digitizer Assembly




- Insert a spudger into an opening between the daughterboard and plastic housing.
  - Lift the daughterboard cover up and off the frame.
- i** If Jeff, Max, Cole, Corey, Guy, Leslie, Harry, or Matt were already here, consider searching your device for surveillance bugs.

## Step 15




- Use the flat end of a nylon spudger to pry the white and black antenna connectors up off the daughterboard.
- ⚠** These must be firmly secured during reassembly. Failure to secure the antenna connections will affect your reception and call quality.

## Step 16

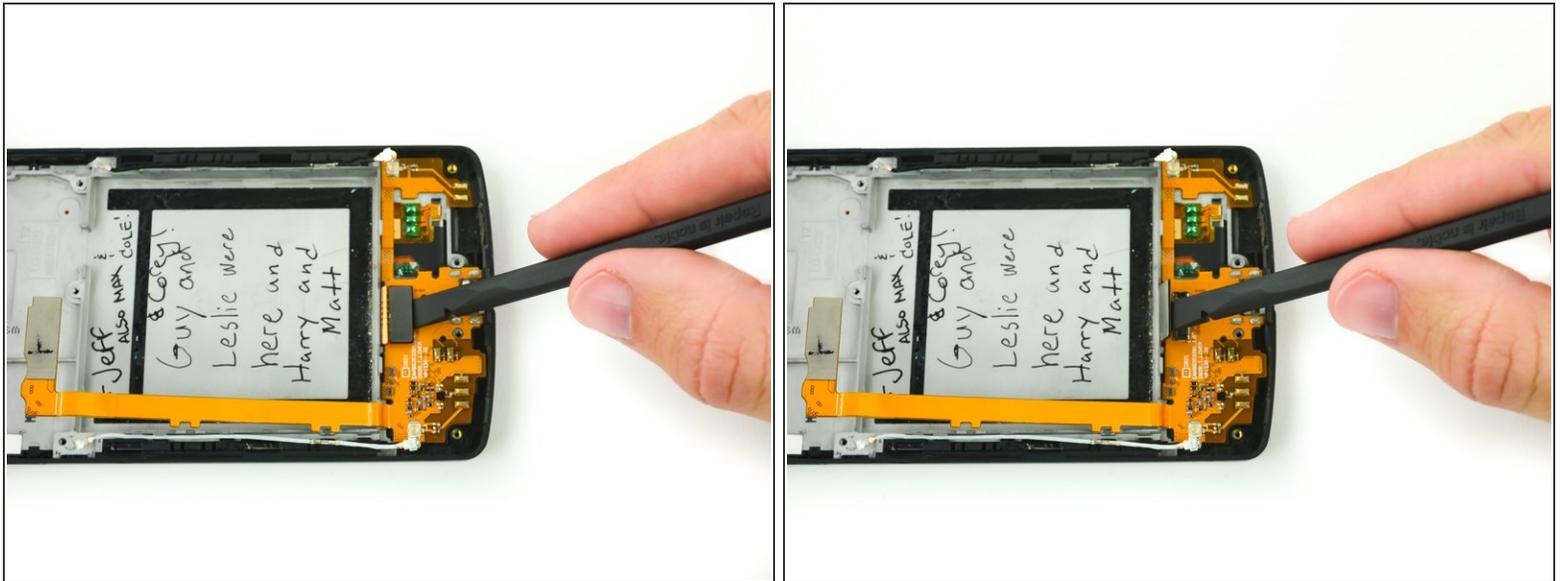

- Use the flat end of a nylon spudger to pry the digitizer ZIF connector up off the daughterboard.

## Step 17

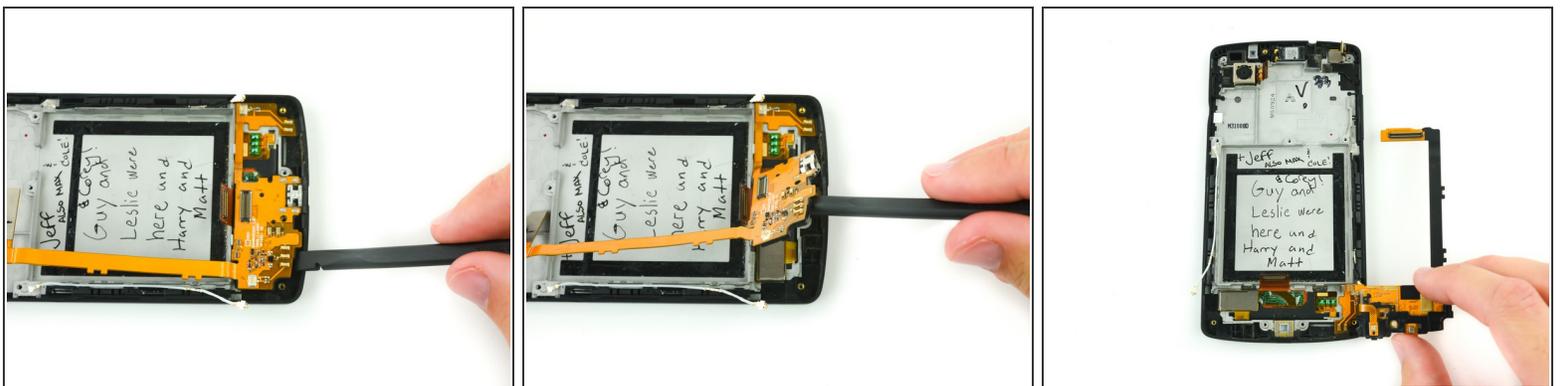

- Insert a nylon spudger into an opening beneath the daughterboard and pry it up to free it from the frame.

**⚠** The frame around the micro-USB port is very fragile—take care not to break this small plastic bridge.


- i** Do not disconnect the daughterboard entirely. Gently fold it to the side of the phone.

## Step 18



- Use an iOpener or heat gun and carefully apply heat to the digitizer panel to soften the adhesive that secures it to the frame.
- ⓘ Hold the heat gun approximately 8-10 inches from the device and apply heat in a gentle back-and-forth motion.

## Step 19

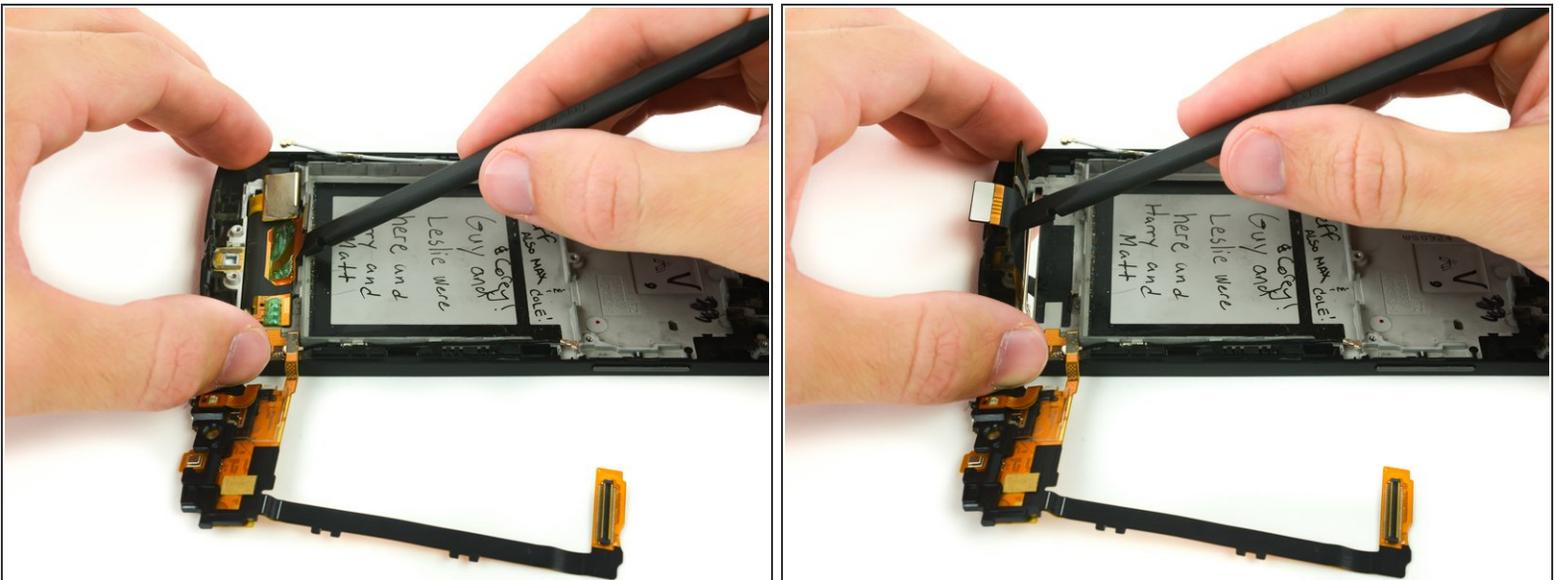

- Work the flat end of a nylon spudger under the digitizer panel. Gently pry the panel up to free it from the adhesive.


**⚠** The phone may be too hot to touch from the heat gun. Allow a moment for it to cool to avoid burning your fingers.

## Step 20




- Use a heat gun or an iOpener to soften the adhesive along the edges of the screen.

## Step 21

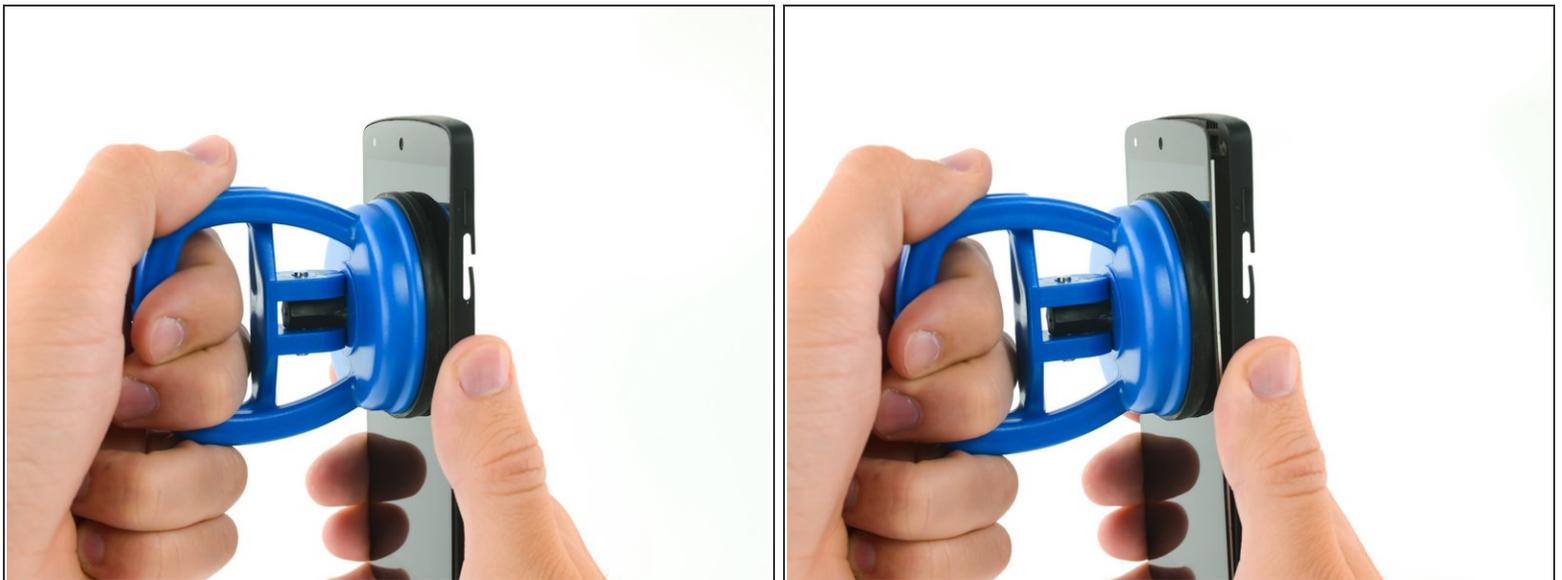


- Use a suction cup to firmly pull the screen away from the frame.
- ⓘ The Nexus 5 has a very thin layer of adhesive. This should not require excessive force. Apply additional heat as needed to soften the screen adhesive.

## Step 22

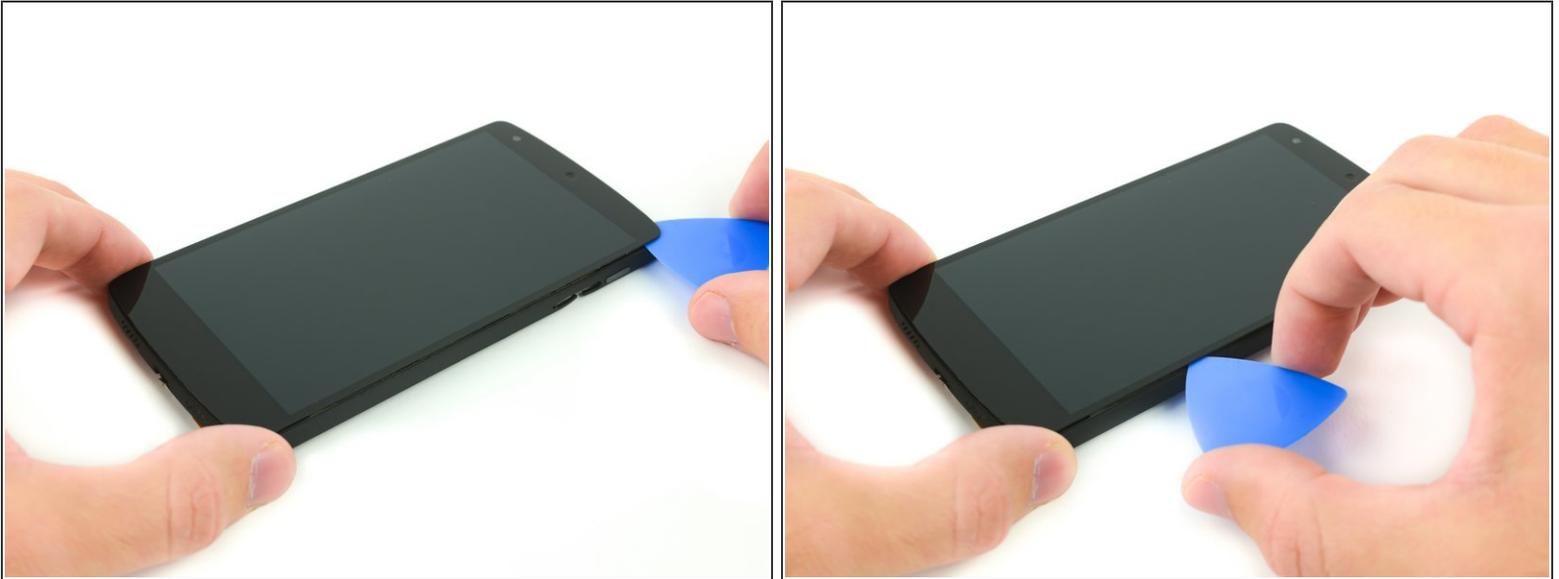

- Insert an opening pick in the gap between the screen and the frame.
- Work the opening pick along the edges of the screen to break any remaining adhesive and free the screen assembly.

## Step 23

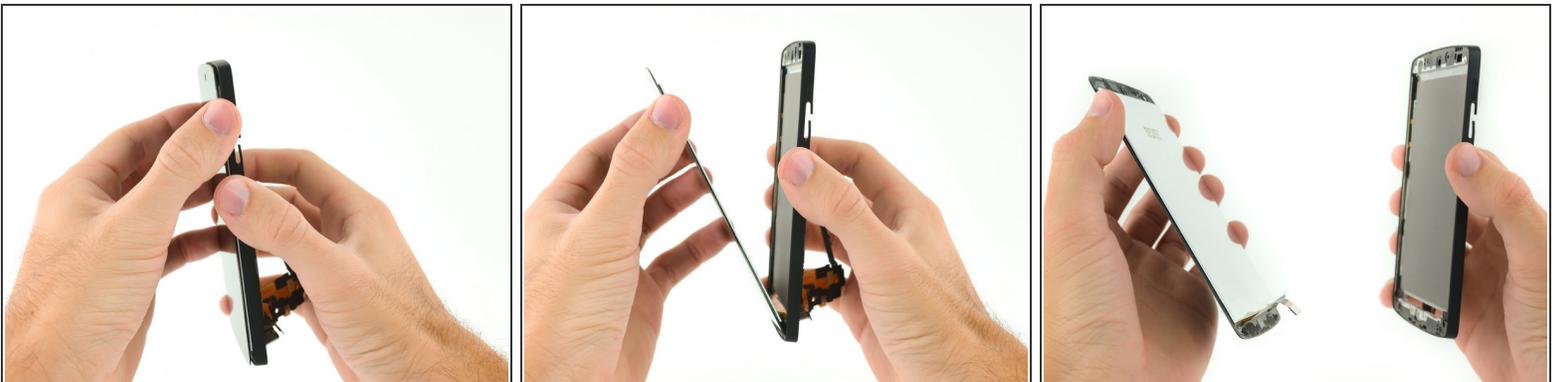

- Gently remove the LCD screen and digitizer assembly.  
**⚠ Carefully feed the digitizer ribbon cable through the frame.**

To reassemble your device, follow these instructions in reverse order.